

These instructions are to be used if your machine is using OS2 software

To make the Auto-extract floppy disk:

- 1.) Save the attached file {Makedisk.exe} to a known location on your computers hard drive. [Makedisk.exe](#)
- 2.) Insert a blank floppy disk into your computers floppy disk drive.
- 3.) Find the file {Makedisk.exe} in the location where you saved it.
- 4.) Double click on the file {Makedisk.exe} and a "WinZip Self-Extractor" Dialog box should appear.
- 5.) Select the Unzip button and after a few moments a Dialog box should appear stating that 3 files unzipped successfully.
- 6.) Select OK, then select the Close button. Your Auto-extract floppy disk should now be ready to take to the machine(s).

To use the Auto-extract floppy disk at the machine(s):

- 1.) Take the floppy to the machine and insert it into the floppy drive.
- 2.) Quit the Thermwood software by pressing the "Alt" and "X" keys at the same time. When the Thermwood software quits, the Startup.Cmd window will appear.
- 3.) At the command prompt, type A: and then press the "Enter" key.
- 3.) At the command prompt, type UPGRADE and then press the "Enter" key and follow the instructions on the screen.
- 4.) After the screen says FINISHED, you can restart the Thermwood software by pressing the "1" key and then pressing the "Enter" key. This will restart the Thermwood software.

If you have multiple machines on the program, please repeat this process on each machine (the same floppy disk can be used on up to 10 machines).

Please email the extracted file, ASP_UP.ZIP to support@thermwood.com. Please include your company name along with the machine serial number.